

Disable QUBE Wireless Safety on SLS

- Log in and go to “Settings”
- Click the <Wireless Safety> button on the right-hand side

Settings

11-05-2024 06:08:43 AM Heraeus

<input type="checkbox"/>	Act	Version no	Created on	Comment	Preset
EIP					
<input type="checkbox"/>		Version 37	10-24-2024 01:29:31 PM	EIP Regs Low Byte 32 Bit Floats - TEST ASCII Input Telegrams	
<input type="checkbox"/>		Version 36	09-15-2024 10:02:54 AM	EIP Regs Low Byte 32 Bit Floats	
<input type="checkbox"/>		Version 35	09-15-2024 10:00:36 AM	EIP Regs High Byte 32 Bit Floats	
<input type="checkbox"/>		Version 34	09-15-2024 09:56:03 AM	EIP Regs High Byte 32 Bit Ints	
<input type="checkbox"/>		Version 0	02-29-2024 03:33:23 PM	standard telegram	
CMC Birmingham					
<input type="checkbox"/>		Version 11	10-18-2024 12:00:56 PM	Base LMF SLS With Alpha - Lev2 Serial Out - Changed Telegrams for Char Outputs	
<input type="checkbox"/>		Version 10	10-18-2024 11:08:52 AM	Base LMF SLS With Alpha - Lev2 Serial Out - Additional Telegrams for possible formatting issues	
<input type="checkbox"/>		Version 0	10-07-2024 03:46:38 PM	CMC Birmingham LMF MetNet Init Conversion	
CMC Jacksonville					
<input type="checkbox"/>		Version 4	10-07-2024 11:43:06 AM	CMC Jacksonville Stir MetNet Conversion	
<input type="checkbox"/>		Version 3	07-26-2024 09:08:47 AM	Enabled Serial Port 1 - Identical to Serial Port 2.	
<input type="checkbox"/>		Version 2	07-25-2024 12:29:24 PM	Enabled Serial Port 1 - Identical to Serial Port 2	
<input type="checkbox"/>		Version 1	07-25-2024 12:27:51 PM	Enabled Serial Port 1 - Identical to Serial Port 2	

Activate

Edit

Delete

Compare

Export

Import

Set preset

Delete preset

Delete Meas.

Customer info

LAN settings

Set Date/Time

Wireless Safety

Home

History

Troubleshoot

Settings

User settings

About

System tools

Electro-Nite

Log Out

- Uncheck the “Wireless safety mode enabled” checkbox
- Click the <Save> button
- Save your program changes as normal.

