

Heraeus IM² SensorLab to Receiver Box Wiring Guide Using Cat 5/6 Extension and DB9-RJ45 Adapters

⚠ **Wiring Note:** CAT 5/6 and DB9-RJ45 Adapters

- ❑ CAT 5/6 cable has 8 conductors, but DB9 requires 9 pins.
- ❑ Typical standard assigns RJ45 pin 7 → DB9 pin 4.
- ❑ However, Heraeus SensorLab and Receiver Box do not use DB9 pin 4.
- ❑ Instead, they **require DB9 pin 9 for the 24V DC return path**.

✅ **Correct configuration:**

Assign RJ45 pin 7 → DB9 pin 9


Note:

This ensures the 24V DC power loop functions correctly.
Omitting pin 9 will interrupt power delivery to the Receiver Box.




- 1 24V RCVR box supply
- 2 Tx+
- 3 Rx+
- 4 -
- 5 GND
- 6 +5V
- 7 Tx-
- 8 Rx-
- 9 GND for 24V


DB9 FEMALE

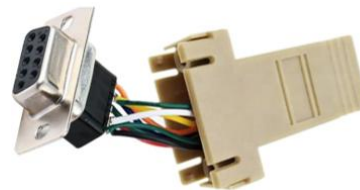

Wiring Diagram

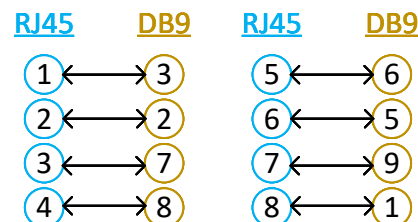

DB9 MALE

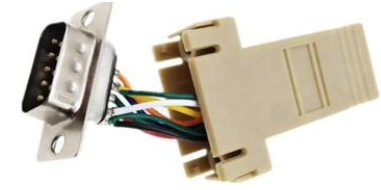

Wiring Diagram

