


# Set SLS to Display Time Interval Between Measurements


---

- Log in to the SLS using the “2448” password.

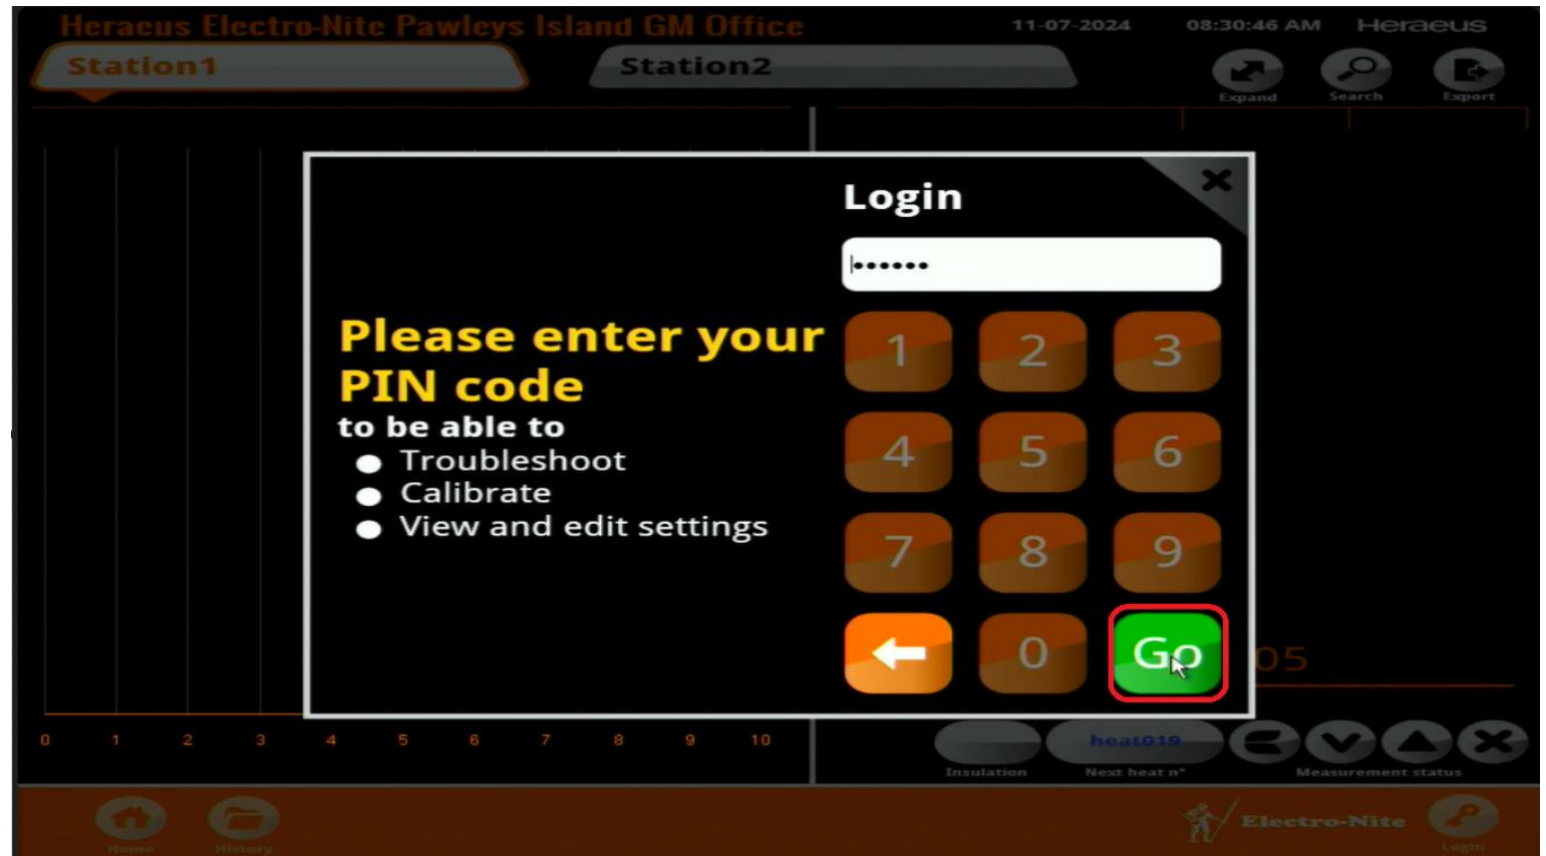

- Go to the “User Settings” screen.
- Click <Edit> button under the “Display settings” section.



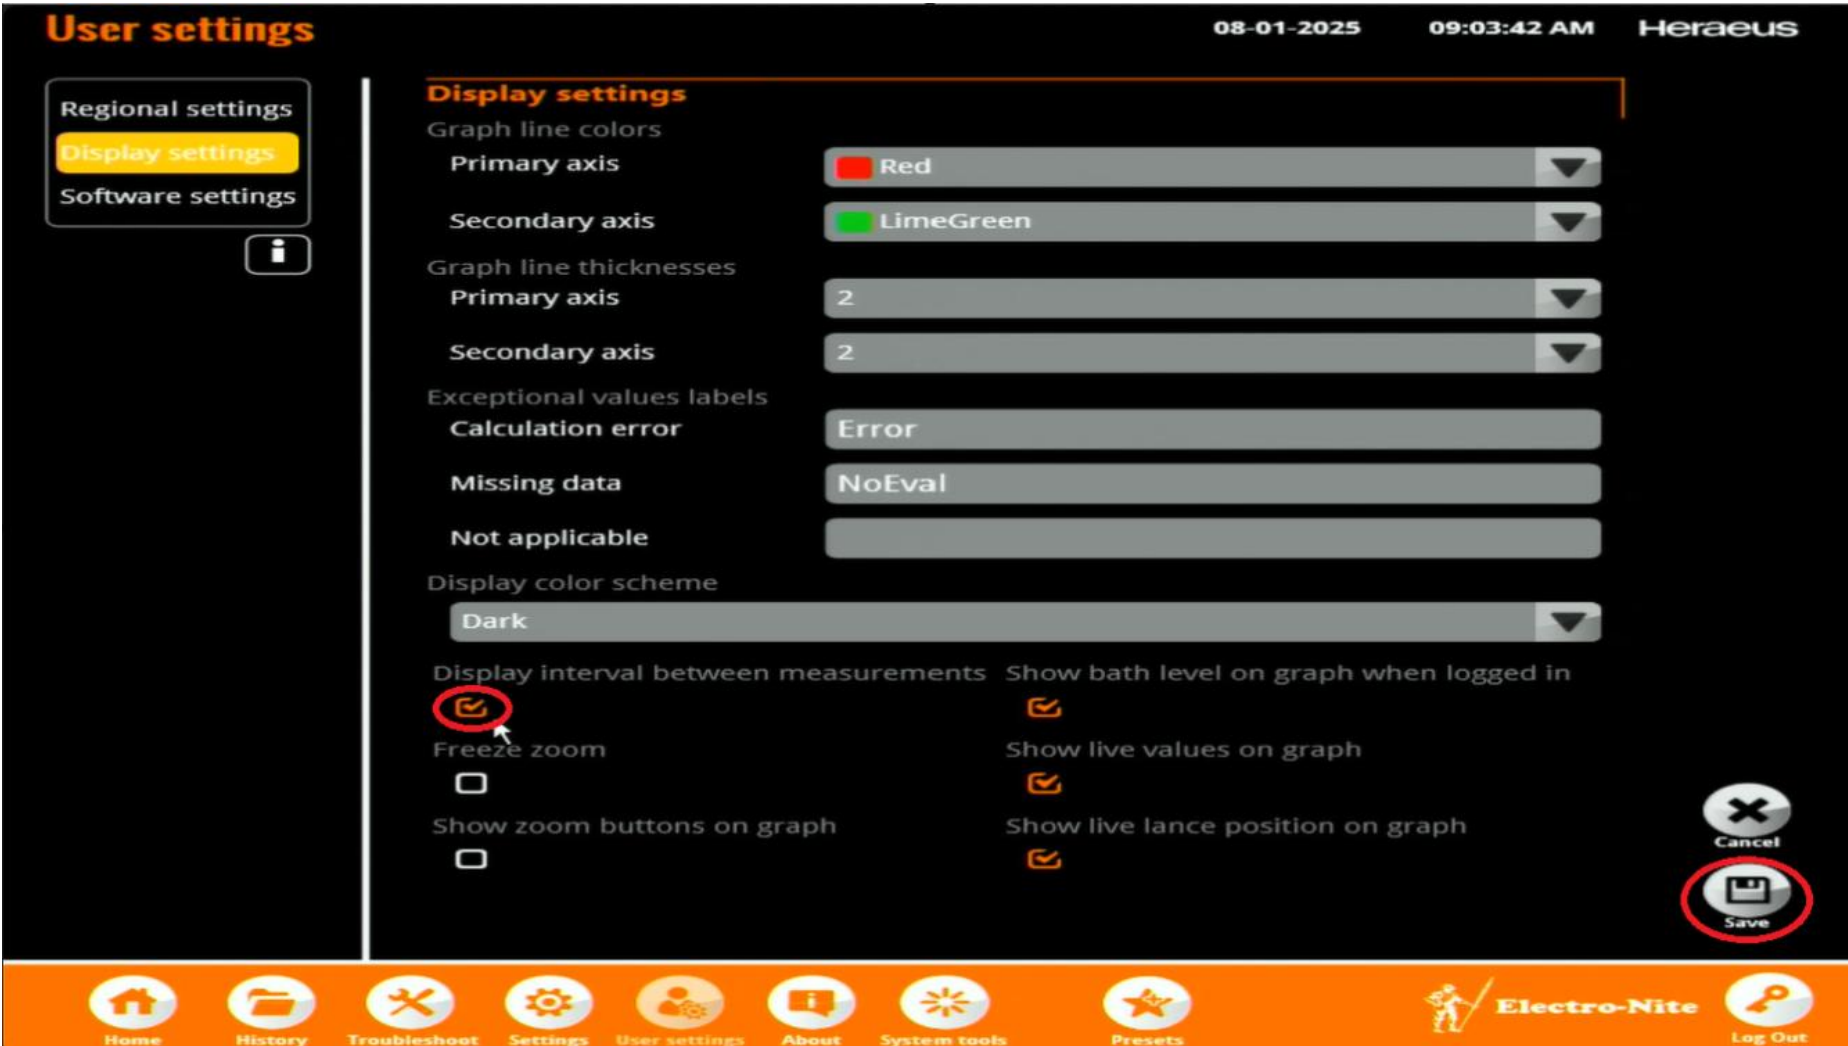

- Check the “Display interval between measurements” checkbox.
- Click <Save> button.

NOTE: This setting is not saved as part of the “Settings File”