




- Download and unzip the SensorLab Install Files
 - In this case “SensorLab_v3.3.0.zip”
- Unzip and copy the folder to a USB drive.
- The installation application file will be:
 - “...SensorLab_v3.3.0\Instrument\DeployAgent.exe”
- Insert The USB Drive with the install files into the SLS.

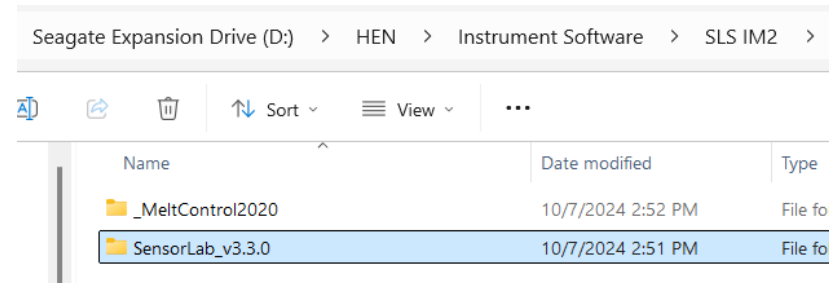

Name	Date modified	Type	Size
Instrument	10/7/2024 2:51 PM	File folder	
OfflineViewer	10/7/2024 2:51 PM	File folder	
changelog.txt	3/31/2022 7:50 AM	Text Document	12 KB
Instructions.txt	10/7/2024 2:49 PM	Text Document	2 KB

Name	Date modified	Type	Size
Include	10/7/2024 2:51 PM	File folder	
Installers	10/7/2024 2:51 PM	File folder	
DeployAgent.exe	3/31/2022 7:55 AM	Application	1,190 KB
DeployAgent.exe.config	3/31/2022 7:55 AM	CONFIG File	6 KB
DeployAgent.pdb	3/31/2022 7:55 AM	Program Debug Dat...	782 KB
Help.bat	3/31/2022 7:55 AM	Windows Batch File	1 KB
Heraeus.MultilabGlobal.CustomCollections.dll	3/31/2022 7:55 AM	Application extension	8 KB
Heraeus.MultilabGlobal.CustomCollections.pdb	3/31/2022 7:55 AM	Program Debug Dat...	20 KB
ICSharpCode.SharpZipLib.dll	3/31/2022 7:55 AM	Application extension	196 KB
Interop.IWshRuntimeLibrary.dll	3/31/2022 7:55 AM	Application extension	37 KB
Interop.TCatSysManagerLib.dll	3/31/2022 7:55 AM	Application extension	37 KB
Ionic.Zip.dll	3/31/2022 7:55 AM	Application extension	452 KB
Microsoft.Practices.EnterpriseLibrary.Common.dll	3/31/2022 7:55 AM	Application extension	327 KB
Microsoft.Practices.EnterpriseLibrary.Logging.dll	3/31/2022 7:55 AM	Application extension	491 KB
Microsoft.Practices.ServiceLocation.dll	3/31/2022 7:55 AM	Application extension	27 KB
Microsoft.Practices.Unity.Configuration.dll	3/31/2022 7:55 AM	Application extension	85 KB
Microsoft.Practices.Unity.dll	3/31/2022 7:55 AM	Application extension	131 KB
Microsoft.Practices.Unity.Interception.Configuration.dll	3/31/2022 7:55 AM	Application extension	47 KB
Microsoft.Practices.Unity.Interception.dll	3/31/2022 7:55 AM	Application extension	123 KB
SensorLab.bat	3/31/2022 7:55 AM	Windows Batch File	1 KB
SevenZipSharp.dll	3/31/2022 7:55 AM	Application extension	148 KB

- Log in to the SLS with the “Daily Password”
 - Call Heraeus technicians to get the “Daily Password”
- Go to the “System Tools” screen
 - Click <Update Software>
- A “Update Software” popup will appear
 - Click <Yes>

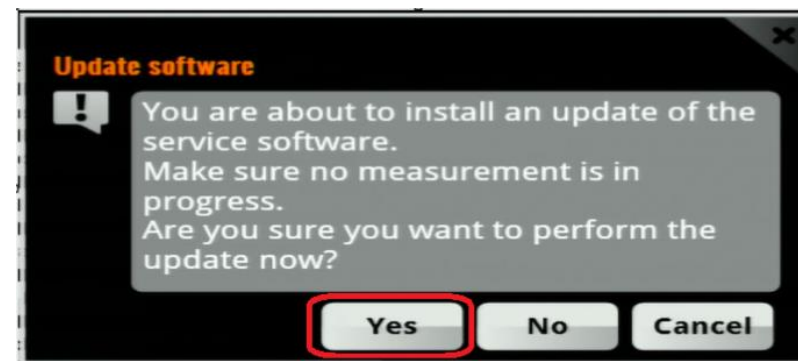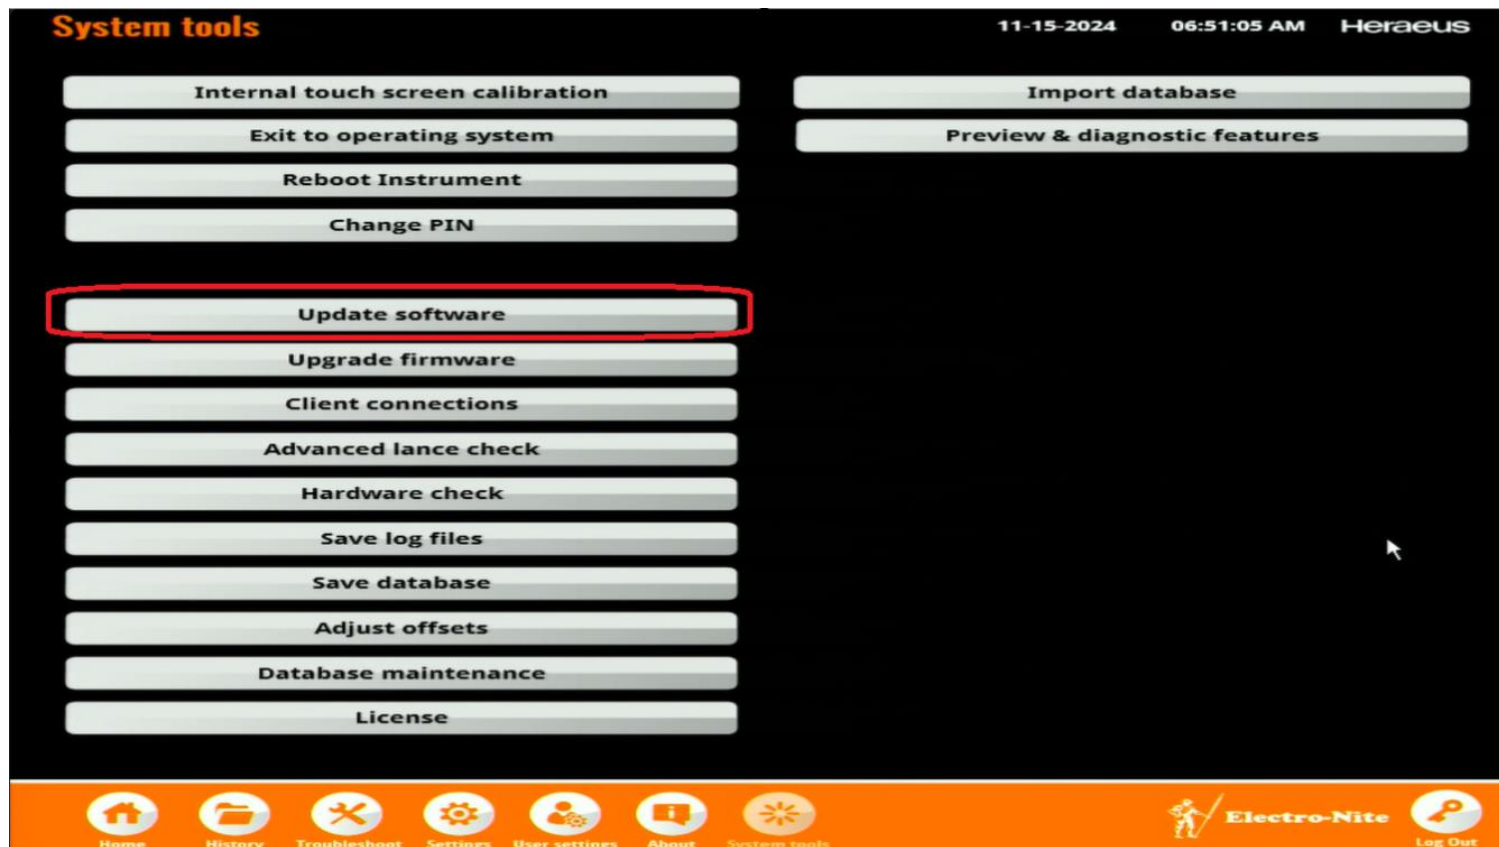

- Navigate to the USB drive and the directory with the install files.
- Select “DeployAgent.exe”
- Click <Open>
- Follow the instructions to complete the install process.

